



1483 POINSETTIA AVE., STE. #101
VISTA, CA 92081 USA

miniWIPER for miniDOT

USER'S MANUAL

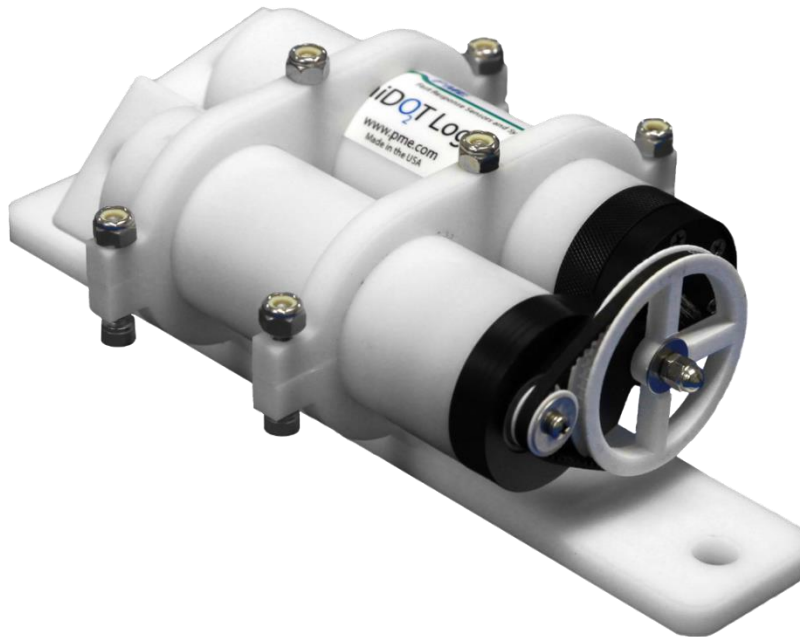


TABLE OF CONTENTS

WARRANTY.....	3
Limited Warranty	3
SAFETY INFORMATION.....	5
Bursting Hazard.....	5
CHAPTER 1: INSTALLATION	6
1.1 Overview.....	6
1.2 Installation Instructions.....	7
1.3 Wipe Considerations	9
CHAPTER 2: SOFTWARE	16
2.1 Overview and Software Installation	16
2.2 miniWIPERControl	16
2.3 miniWIPERPlot.....	17
2.4 miniWIPERConcatenate.....	21
CHAPTER 3: MINIWIPER	23
3.1 Overview.....	23
3.2 Opening and Closing the Wiper	23
3.3 Electrical Connections and Controls	23
3.4 Battery Replacement.....	24
3.5 Final Mounting Instructions	24



WARRANTY

Limited Warranty

Precision Measurement Engineering, Inc. (“PME”) warrants the following products to be, as of the time of shipment, free from defects in materials or workmanship under normal use and conditions for the period indicated below corresponding to the product. The warranty period commences on the original date of purchase of the product.

Product	Warranty Period
Aquasend Beacon	1 year
miniDOT Logger	1 year
miniDOT Clear Logger	1 year
miniWIPER	1 year
miniPAR Logger (Logger only)	1 year
Cyclops-7 Logger (Logger only)	1 year
C-FLUOR Logger (Logger only)	1 year
T-Chain	1 year
MSCTI (excludes CT/C-sensors)	1 year
C-Sense Logger (Logger only)	1 year

For valid warranty claims made and covered defects existing during the applicable warranty period, PME will, at PME’s option, repair, replace (with the same or then most similar product) or repurchase (at purchaser’s original purchase price), the defective product. This warranty extends solely to the original end-user purchaser of the product. PME’s entire liability and the sole and exclusive remedy for product defects is limited to such repair, replacement or repurchase in accordance with this warranty. **This warranty is provided in lieu of all other warranties express or implied, including, but not limited to warranties of fitness for a particular purpose and warranties of merchantability.** No agent, representative, or other third party has any authority to waive or alter this warranty in any way on behalf of PME.

WARRANTY EXCLUSIONS

The warranty does not apply in any of the following circumstances:



- I) The product has been altered or modified without PME's written authorization,
- II) the product has not been installed, operated, repaired, or maintained in accordance with PME's instructions, including, where applicable, use of proper grounding to an earth ground source,
- III) the product has been subjected to abnormal physical, thermal, electrical, or other stress, internal liquid contact, or misuse, neglect, or accident,
- IV) the product failure occurs as a result of any cause not attributable to PME,
- V) the product is installed with ancillary devices such as flow sensors, rain switches, or solar panels that are not listed as compatible with the product,
- VI) the product is installed in a non-PME specified enclosure or with other incompatible equipment,
- VII) to address cosmetic issues such as scratches or surface discoloration,
- VIII) operation of the product in conditions other than that for which the product was designed,
- IX) the product has been damaged due to events or conditions such as caused by lightning strikes, power surges, unconditioned power supplies, floods, earthquakes, hurricane, tornados, vermin such as ants or slugs or intentional damage, or
- X) products provided by PME, but manufactured by a third-party company, which products are subject to the applicable warranty extended by their manufacturer, if any.

There are no warranties that extend beyond the above limited warranty. In no event is PME responsible or liable to purchaser or otherwise for any indirect, incidental, special, exemplary, or consequential damages, including, but not limited to, lost profits, loss of data, loss of use, business interruption, loss of good will, or cost of procuring substitute products, arising out of or in relation to the product, even if advised of the possibility of such damages or losses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARRANTY CLAIM PROCEDURES

A warranty claim must be initiated within the applicable warranty period by first contacting PME at info@pme.com to obtain an RMA number. The purchaser is responsible for proper packaging and return shipment of the product to PME (including shipping expense and any related duties or other costs). The issued RMA number and purchaser's contact information must be included with the returned product. PME is NOT liable for loss or damage of the product in return transit and recommends that the product be insured for its full replacement value.

All warranty claims are subject to PME's testing and examination of the product to determine if the warranty claim is valid. PME may also require additional documentation or information from the purchaser to evaluate the warranty claim. Products repaired or replaced under a valid warranty claim will be shipped back to the original purchaser (or its designated distributor) at PME's expense. If the warranty claim is found to be not valid for any reason, as determined by PME in its sole discretion, PME will notify the purchaser at the contact information provided by the purchaser.



SAFETY INFORMATION

Bursting Hazard

Should water enter the miniWIPER and come into contact with the enclosed batteries, the batteries may generate gas causing the internal pressure to increase. This gas will likely exit via the same location where the water entered, but not necessarily. The miniWIPER is designed to release internal pressure as the end cap is unscrewed, prior to the disengagement of the end cap threads. If internal pressure is suspected, then treat the miniWIPER with extreme caution.



CHAPTER 1: INSTALLATION

1.1 Overview


Your miniWIPER will provide a gentle brush action across the miniDOT oxygen sensitive membrane, which is intended to reduce or eliminate fouling organisms. This wiper is an accessory for the miniDOT that can be added at any time.

The wiper will wipe at intervals between 1 hour and 24 hours. At time of shipment the wiper is set to wipe every 6 hours. Wipe interval can be selected by the customer with intervals as short as 1 hour or as long as 24 hours. (Wipe intervals outside this range are available. Please contact PME.)

miniWIPER connects to a Windows HOST computer via USB and appears as a Local Disk. This local disk contains software to select wipe intervals and perform other tasks. miniWIPER records various parameters each time it performs a wipe. These appear as files on this local disk.

The miniWIPER for miniDOT product consists of the wiper motor, USB communication cable, and bracket shown in the picture to the right. The miniDOT shown is supplied by the customer.


Construct the bracket from the parts supplied by PME as shown in the picture above. Install bolts and nuts loosely.

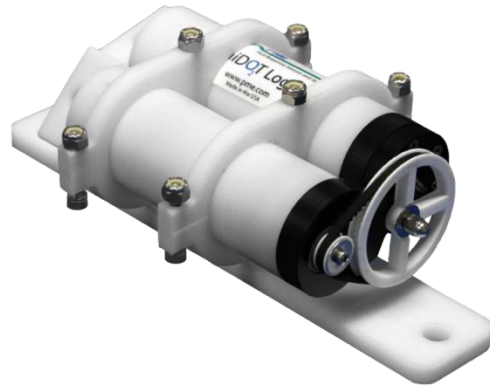

1.2 Installation Instructions

Please view the installation video located on the miniWIPER page of PME's site at <https://www.pme.com/products/miniwiper>.

Begin miniWIPER operation by setting the Wiper Control Switch to "WIPE" as described in Chapter 3 of this manual. Begin miniDOT Logger operation as described in the miniDOT Logger Manual. Operation of both units must begin now since their control switches will not be accessible after they are mounted in the bracket.

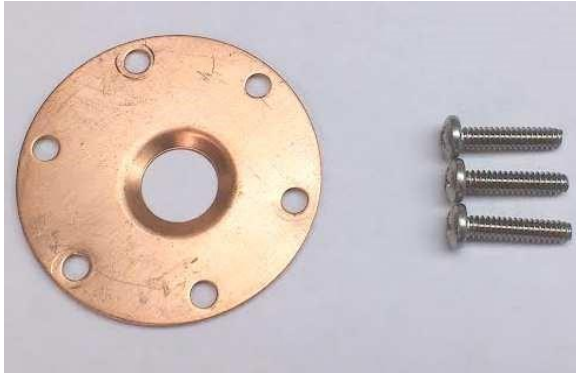

If not already on the miniDOT, install the miniDOT Anti-Fouling Copper Plate Kit that is included with the miniWIPER. The kit includes:

- 1 Anti-fouling Copper Plate disc
- 3 Phillips Pan Head Screws

Use a screwdriver to remove 3 of the 6 screws (every other one). Do NOT remove all screws. At least 3 must always remain screwed in. Save the removed screws for when the copper plate is removed.



Position the Copper Plate faced down so that the notches in the Copper Plate perfectly align over sensing spot and over the screw holes.



Install the three pan head screws included in the kit. Gently tighten.



While maintaining the alignment (pictured right), slide miniWIPER and miniDOT Logger relative to each other until the brush engages the sensing foil as shown below. You may rotate the small pulley slowly by hand. This causes the internal motor to turn but will not damage miniWIPER.

CAUTION: Do not rotate the large pulley but instead allow the belt to move this pulley while rotating the small pulley by hand. Rotation of the large pulley by hand can damage miniWIPER.



Adjust brush pressure onto the miniDOT so that it is similar to the pressure shown in the video.

Pressure should be just enough to implement a successful "scrub". Do not apply so much brush pressure that the motor significantly slows when the brush climbs onto the miniDOT.

Tighten the 6 bolts while maintaining the miniWIPER and miniDOT positions. First tighten the 4 outer bolts until the gap in white plastic closes. Next tighten the inner two until the miniWIPER and miniDOT Logger are securely held. A small gap in white plastic on these inner bolts will remain when all is secure.

Trigger a wipe by passing a strong magnet near the miniWIPER. Observe the wipe. Note that the wiper will perform 1 "scrub" as a part of the overall wipe. The wiper will move the brush past the foil, then back up past the foil, and then complete the wipe. This scrubbing action causes the brush



bristles to "pole vault" while in contact with the foil. Hopefully, this action will be detrimental to whatever fouling organisms are attempting to colonize the foil.

Please note that miniWIPER will not respond to the magnet if miniWIPER is not in Wipe mode.

The miniDOT Logger pictured on the left has a copper plate installed. miniWIPER can be used with or without the copper plate. The copper plate is an accessory of miniDOT Logger and can be purchased from PME (sales@pme.com).



1.3 Wipe Considerations

BRUSH FORCE

The amount of force placed by the brush onto the foil depends on how closely the brush is positioned against the foil. There is a trade-off here which is selected by adjusting the brush against the foil. Scrubbing organisms from the foil is hard on the organisms (which is a good thing) but also hard on the foil itself. The foil should resist more than a year of hourly gentle scrubbing. PME recommends brush adjustment to implement a slight "pole vault" of the bristles but brush pressure and wipe interval must ultimately be selected to respond to local fouling conditions.

You may have to adjust the brush position from time to time as the brush wears. The brush will likely require replacement from time to time.

SCRUBBING

miniWIPER is set to make 1 scrub of 90 degrees each wipe. Both the number of scrubs and the scrub angle are parameters that external software can change, although the software supplied with miniWIPER is not able to do this. There is battery capacity for additional scrubbing. Additional scrubbing will better discourage the fouling organisms but will ultimately scrub through the sensing foil faster. Please [contact PME](#) if you want to implement additional scrubbing.

WIPING AND RECORDING INTERVAL

At each wipe, miniWIPER makes various measurements of internal features and records these. The default wipe interval is 6 hours. However, it is also possible to instruct the miniWIPER to wipe and record at different intervals. This is accomplished by running the miniWIPERControl.jar program supplied with the miniWIPER. Recording intervals must be 1 or more hours and must be less than or equal to 24 hours. Intervals outside this range will be rejected by the miniWIPERControl program. ([Contact PME](#) for other recording intervals.)

Please refer to Chapter 2 for instructions on operating the miniWIPERControl program.

TIME

All miniWIPER times are UTC (formerly known as Greenwich mean time (GMT)). The miniWIPER internal clock will drift in the <10 ppm range (< about 30 seconds/month) so you should plan to connect it occasionally to a HOST computer having an Internet connection. The miniWIPERControl program will automatically set time based on an Internet time server.

Please refer to Chapter 2 for instructions on operating the miniWIPERControl program.



FILE INFORMATION

The miniWIPER software creates 1 file daily on the miniWIPER's internal SD card. The number of wipes recorded in each file will depend upon the wipe interval. Files are named by the time of the first measurement within the file based on the miniWIPER's internal clock and expressed in YYYY-MM-DD HHMMSSZ.txt format. For example, a file having the first measurement on September 9, 2014 at 17:39:00 UTC will be named: 2014-09-09 173900Z.txt.

Files can be uploaded from the miniWIPER by connecting it to a HOST computer. Use the HOST computer's copy/paste functions to move the files from the miniWIPER to the HOST computer.

Each wipe recording within the files has a time stamp. The time stamp format is Unix Epoch 1970, the number of seconds that have passed since the first moment of 1970. This may be inconvenient in some cases. If so, use the miniWIPERConcatenate program which not only concatenates all the files, but also adds more readable statements of the time stamp.

Please refer to Chapter 2 for instructions on operating the miniWIPERConcatenate program.

The miniWIPER requires time and battery energy to work through the file directory on the SD card to allocate new file space. A few hundred files on the SD card is not a problem, but as the number of files grows large into the thousands then the miniWIPER may suffer decreased battery life or other performance problems. Please, at the earliest convenient time, copy the recorded files to a HOST computer and delete them from miniWIPER's SD card. Also, do not use miniWIPER to store files unrelated to the miniWIPER's operation.

AA ALKALINE BATTERY LIFE

Alkaline batteries will give somewhat less performance than lithium, especially at low temperatures. Alkaline batteries are superior to lithium in one way: you can determine how much battery life remains by measuring the battery terminal voltage. For short deployments alkaline batteries will provide adequate performance. For longer deployments, or for deployments in cold environments substitute lithium batteries.

AA LITHIUM BATTERY LIFE

The miniWIPER consumes battery energy mostly from operating the wiper motor, but also slightly from simply keeping track of time, writing files, sleeping, and other activities. The amount of energy consumed at each wipe depends on the friction in the mechanical system, on the hydrostatic loading of the wiper shaft, and especially on the environmental temperature. Unfortunately, deep deployments also tend to be cold, which is the worst case.

At the time of this writing it appears that about 10K wipes can be obtained in shallow warm water. At 25-meter depths we estimate about 8K wipes in warm water. Cold temperature change battery performance substantially. A safety factor of 2 should be applied. At present we recommend deployments be for no longer than 3 months or 2K wipes.



miniWIPER records battery voltage and the number of wipes. It is not possible to accurately tell the charge state of a lithium battery by measuring its terminal voltage since this voltage responds to battery temperature. If you have a general idea of the number of wipes already obtained on a battery, then you can make a guess as to how many more wipes remain.

Monitor battery terminal voltage. You cannot tell from terminal voltage of a lithium battery how long the battery will last, but you can tell if it will die soon. The Low Drain Performance plot below gives an estimate of terminal voltage for both lithium and alkaline batteries. Your measured voltage will be 2X what is shown below since there are two batteries in series within the miniWIPER. You can operate batteries down to about 2.8 Volts (for two in series, 1.4 Volts on the graph below). Measure the series voltage as shown in the picture below. Your batteries are dead if this measurement is less than 2.8 Volts at room temperature, higher if at low temperature.

You may also use alkaline AA batteries such as Duracell Coppertop. They will not last nearly as long, especially at low temperatures, but will likely be adequate for several weeks at 1-hour interval.

When replacing batteries use only fresh batteries. Do not mix battery types. If one battery differs in type or charge level from the other and the miniWIPER runs them to full discharge, then one battery may leak.


Err on the side of caution when planning your deployment.

The recommended battery is the Energizer L91 lithium battery. For more information including the performance at low temperatures, use this link: <http://data.energizer.com/PDFs/I91.pdf>

The figure below gives a general idea of terminal voltage vs. lifetime. Service life in hours is incorrect since miniWIPER draws 50 to 100 mA depending on various factors, but the general shape of the voltage vs. time gives an estimate of life remaining. This plot is taken from the manufacturer's specification. The plot is for a single battery. The miniWIPER halts operation at a total of 2.8 Volts.

BATTERY LIFE EXAMPLES

The several figures below show battery life tests for the very first wiper made. Tests were conducted at 3 wipes per minute with 12-hour calibration wipe interval. All tests conducted at atmospheric pressure. Different wipers will have different endurance due to differences in temperature, hydrostatic pressure, and the individual wiper's mechanical friction. Please use a safety factor of 2 for shallow water and 4 for deep water when planning battery life.

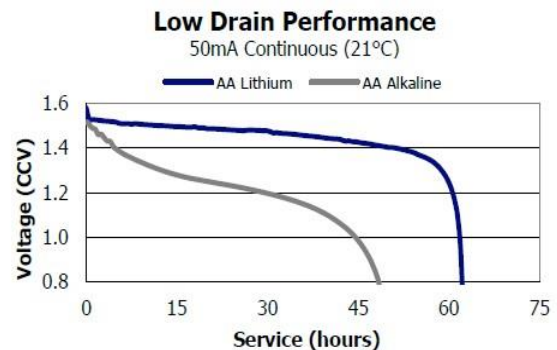


When evaluating the status of batteries from terminal voltage please remember the voltages presented below vary with temperature and vary depending on how frequently the wiper is actuated. The tests below are somewhat artificial since the wiper wipes very frequently in the tests compared to expected field use.



miniWiper Measurements


5958-200186

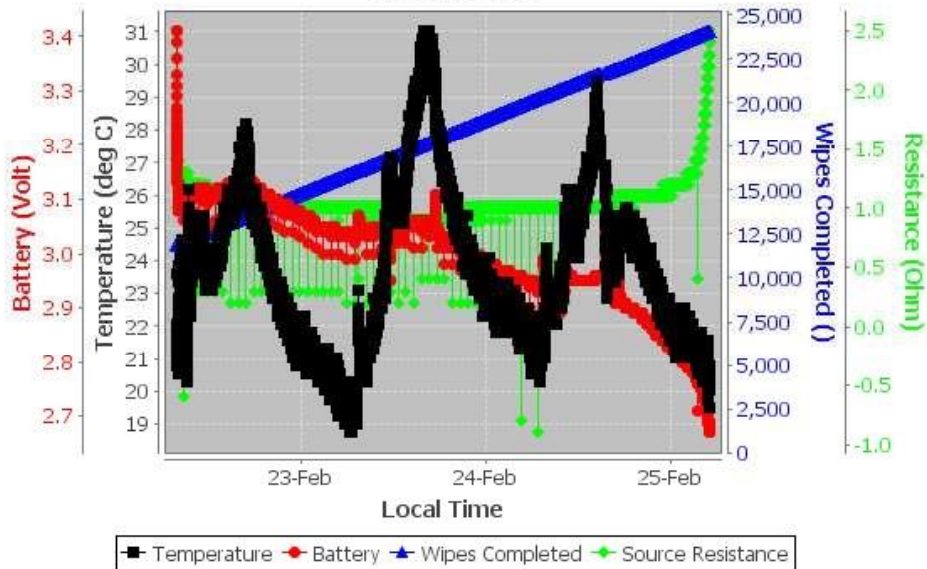

Energizer L91 Lithium AA at room temperature. 12211 single scrub wipes.

miniWiper Measurements

5958-200186

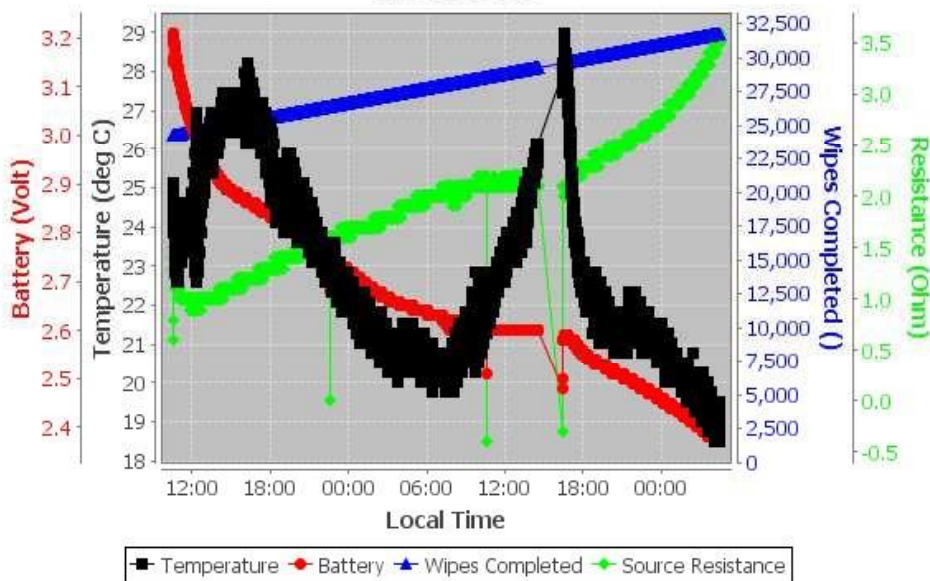


Duracell alkaline AA at room temperature. 7533 single scrub wipes.



miniWiper Measurements

5958-200186

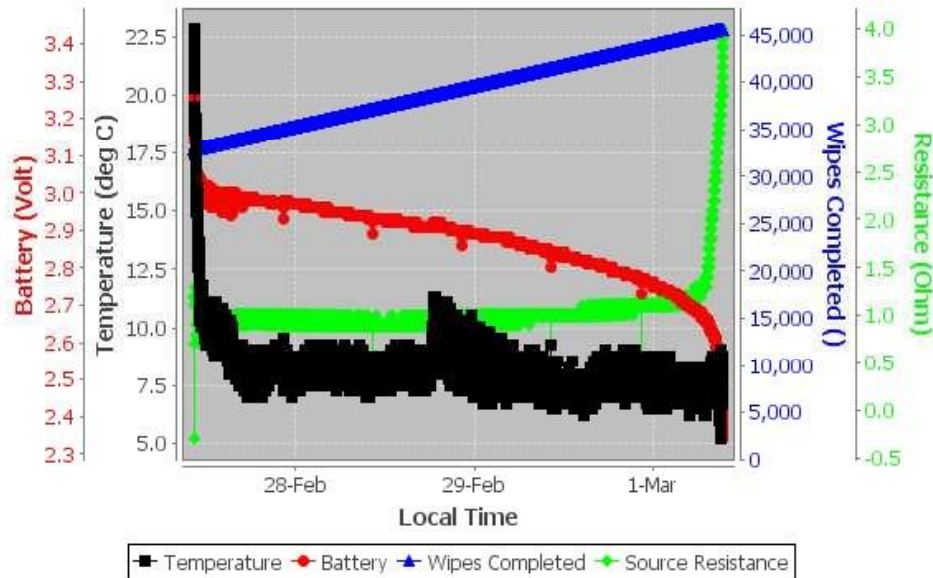

Energizer L91 Lithium AA at 4 deg C. 12785 single scrub wipes, no pressure.

COIN CELL BATTERY LIFE

The miniWIPER uses a coin cell battery for backup of the clock when the power is switched off. This coin cell battery will supply many years of clock operation. Should the coin cell battery discharge, then it must be replaced by PME. [Contact PME.](#)

MAINTENANCE

The miniWIPER will require maintenance from time to time. Parts most likely to need replacement are the brush and the o-ring sealing the drive shaft. The brush will be replaced by the customer by replacing the brush + wheel. The o-ring can be replaced by the customer. We do not know the replacement interval currently.

HOUSING O-RING AND SEAL

When the white pressure housing is screwed on to the black end cap, then it passes along the o-ring located in the black end cap several revolutions. Keep this o-ring lightly lubricated with silicone grease or an oil compatible with buna-N o-ring material.

When the miniWIPER is opened after deployment a small number of water drops are deposited on the inner surface of the o-ring. When the white pressure housing is screwed back on to the black end cap, then these drops can become trapped inside the miniWIPER. Be sure to carefully dry the



o-ring and adjacent surfaces (especially underneath) prior to closing the miniWIPER. Re-lubricate the o-ring at this time.

LED INDICATIONS

The miniWIPER indicates its operation with its LED. The table below presents LED indications:

LED	Reason
1 Green Flash	Normal. Presented immediately after new batteries are installed. Indicates that the CPU has started its program.
5 Green Flashes	Normal. Indicates that miniWIPER is beginning to record measurements. This indication appears in response to switching the Logger Control Switch to "Record."
5 Red Flashes	Normal. Indicates the miniWIPER is ending recording of measurements. This indication appears in response to switching the Logger Control Switch to "Halt."
Continuously Green	Normal. Indicates the miniWIPER is connected to a HOST computer via the USB connection.
Continuously Flashing Red	SD card write error or dead batteries. Try removing/reinstalling batteries. Contact PME.

CLOSING AND OPENING

Close and open the miniWIPER like you would a flashlight; open by unscrewing the white pressure housing from the black end cap. Close by screwing the white pressuring housing on to the black end cap. When closing, do not tighten the white pressure housing. Just screw it on until it makes contact with the black end cap. See Chapter 3 for more instructions.

CLEANING

Please refer to the sensor manual for sensor cleaning instructions. Clean the wiper by gentle scrubbing of attached fouling organisms with a stiff brush. You may immerse the wiper briefly, a few seconds, in a dilute acid such as vinegar or a mixture of 5% muriatic acid 95% water by volume between scrubblings to loosen calciferous organisms. Rinse the wiper completely in water after the cleaning is completed.

STORAGE WHEN NOT IN USE

Remove the batteries. Keep the black end covered with the cap supplied by PME. If the cap is lost, then cover the black end cap with aluminum foil. There may be a calibration effect of ambient lighting so attempt to keep ambient light from reaching the sensing foil as much as possible.



JAVA

miniWIPER programs depend on Java and require Java 1.7 or higher. Update Java at <https://java.com/en/download/index.jsp>

UPLOAD FILES TO AN ANDROID DEVICE

It is possible to transfer your measurement files from the miniWIPER to your Android device. This operation has 3 prerequisites.

1. An Android device equipped with USB On-The-Go (OTG) feature. OTG is a feature for most modern Android devices that allow them to act as a USB host. OTG was introduced with Android version 3.1 and should be a useable feature for **most** devices. It is still possible that your device does not support OTG. Please test your device with a miniWIPER **prior** to attempting to upload while in the field.
2. A USB OTG cable. This is essentially an adapter with a micro USB connector on one end that connects to your Android device and a standard A type USB plug on the other. The cable supplied with the miniWIPER connects to this end.
3. A "File Explorer" app should be downloaded on your Android device. These types of apps assist with being able to view and move files from device to device. "ES File Explorer" is a free app available on the Google app store and is recommended for use with the miniWIPER.

If the 3 requirements are met, then connect the miniWIPER to your Android device. You should see the miniWIPER's green connection light come on and your Android device will display a message about "preparing USB storage". When "USB storage ready" is shown, then use your "file explorer" program to move your data from the miniWIPER onto your Android device.

Again, it is highly recommended that you try this operation at your workstation prior to depending upon this in the field.

Currently the associated miniWIPER programs miniWIPERPlot and

miniWIPERConcatenate are not supported by the Android devices. Please [contact PME](#) for further information.

ENVIRONMENTAL USE AND STORAGE CONDITIONS

miniWIPER is over the range of 0 to 35 deg C temperature and may be continuously immersed in fresh or salt water to a maximum depth of 25 meters. miniWIPER may be stored in environments ranging from 0 to 100% humidity and temperatures ranging from -20 deg C to +40 deg C.



ELECTRICAL POWER SPECIFICATIONS

miniWIPER is battery powered and requires 2 AA size expendable or rechargeable batteries. Voltage requirement is 3.6 VDC. Maximum current demand is 225 mA.

CHAPTER 2: SOFTWARE

2.1 Overview and Software Installation

Software is supplied on CD or in a zip file. Copy or unzip to any folder on your computer's hard drive. The software will contain these files:

- MiniWIPERControl.jar allows you to see the state of the wiper as well as set the wipe interval.
- miniWIPERPlot.jar allows you to see plots of recorded wipe parameters.
- miniWIPERConcatenate.jar gathers all daily files into one CAT.txt file.
- Manual.pdf is this manual.

These files are located on the root directory of the miniWIPER. This appears as a Local Disk when miniWIPER is connected to a Windows HOST computer.

PME suggests you leave these programs where they are on the miniWIPER, but you may copy them to any folder on your HOST computer's hard drive and operate them from this location.

miniWIPERControl, miniWIPERPlot, and miniWIPERConcatenate are Java language programs that require the HOST computer to have the Java Runtime Engine V1.7 (JRE) or later installed. This engine is commonly required for internet applications and will likely already be installed on the HOST computer. The JRE can be downloaded via internet from


http://www.java.com/en/download/windows_xpi.jsp

At this time miniWIPER is supported on Windows operating systems but may also operate on Macintosh and perhaps Linux.

2.2 miniWIPERControl

Begin program operation by clicking on miniWIPERControl.jar. Software presents the following screen (shown after miniWIPER is connected):



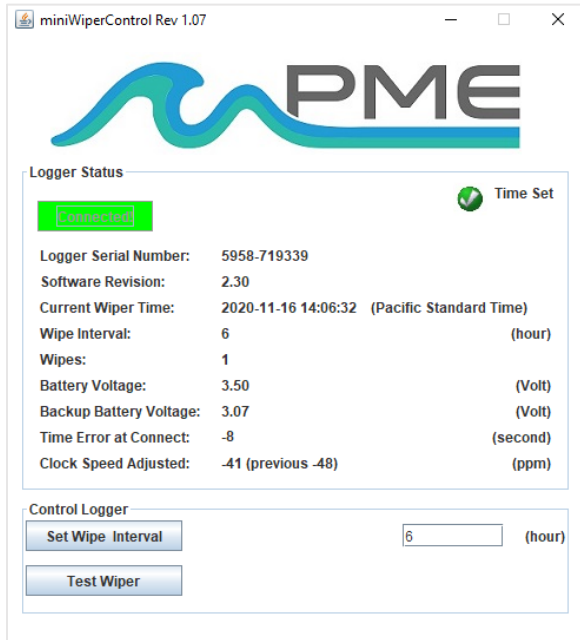

The miniWIPER must be connected to USB at this time. When correctly connected the miniWIPER LED will display a constant green light.

Click the Connect Button. The software will contact the wiper. If the connection is successful, the button will turn green and display “Connected” as shown on the left. The Serial Number and other parameters will be filled in from information taken from the miniWIPER.

If the HOST computer is connected to the internet, the current difference between an internet time server’s time and the miniWIPER internal clock will be displayed. And, if more than a week has passed since time was last set, the miniWIPER clock will be set and a check mark icon will appear. If the HOST computer is not connected to the internet no time services will occur.

The current miniWIPER wipe interval will be displayed next to the Set Wipe Interval button. If this interval is acceptable the interval need not be set.

To set the interval, enter an interval not less than 1 hour and not greater than 24 hours. Click the Set Sample Interval button. Shorter and longer intervals are available. [Contact PME](#).

Click the test wiper button to operate the wiper motor briefly. The wiper will make one complete wipe over a period of about 30 seconds. (A complete wipe is rotation in one direction only. Note that miniWIPER occasionally does a calibration wipe in addition to a scrub wipe. A calibration wipe is a wipe to both rotational endpoints without scrubbing.)


End miniWIPER Control by closing the window. Unplug miniWIPER USB connection.

Upon disconnection of the USB cable the miniWIPER will begin wiping or remain halted as indicated by the position of the Wiper Control Switch.

2.3 miniWIPERPlot

Begin the program operation by clicking “miniWIPERPlot.jar”. The program presents the screen shown to the right.



The miniWIPERPlot program plots the files recorded by the miniWIPER. The program reads all the miniWIPER files in a folder, except the CAT.txt file. Select the folder that contains the files recorded by the miniWIPER. If the miniWIPERPlot program is run directly from the miniWIPER, then the program will suggest the folder that is located on the miniWIPER’s SD card. You may accept this by clicking “Plot”, or you may click “Select DATA Folder” to browse to your HOST computer’s hard

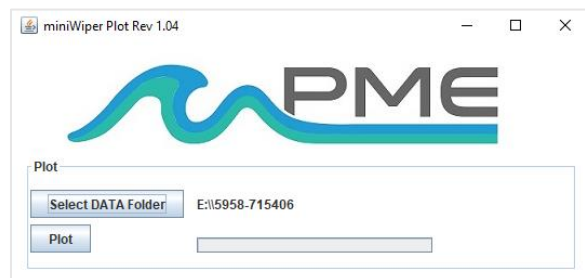

drive. If the number of measurements recorded is small, for example a few thousand, then these can conveniently be plotted directly from the miniWIPER's storage. However, it is best to copy large measurement sets to the HOST computer and select them there. The file access to the miniWIPER is slow.


The miniWIPER's measurement folders must NOT contain any files besides those the miniWIPER recorded and the CAT.txt file. Click "Plot" to begin plotting.

The program reads all the miniWIPER's data files in the selected folder. It concatenates these and presents plots that are similar to the plots shown below:

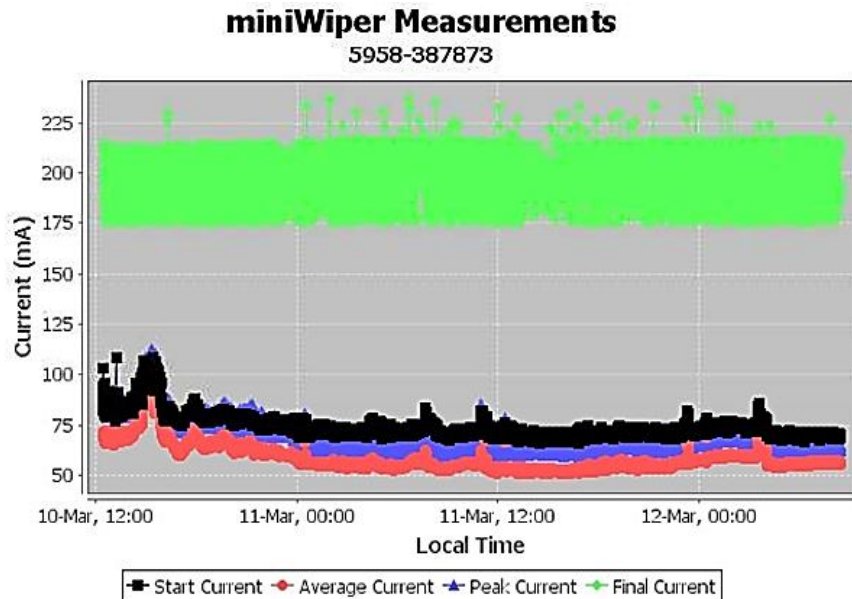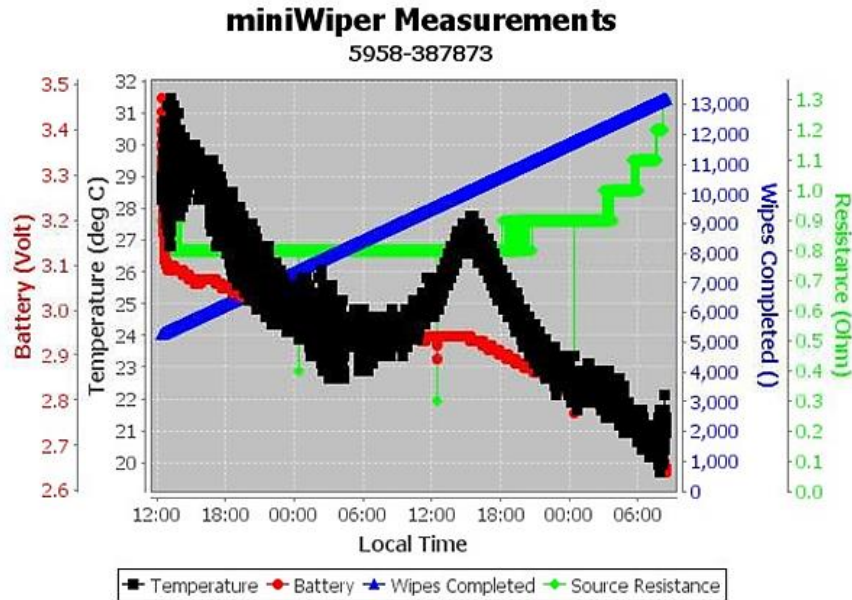


miniWiper Measurements

5958-387873

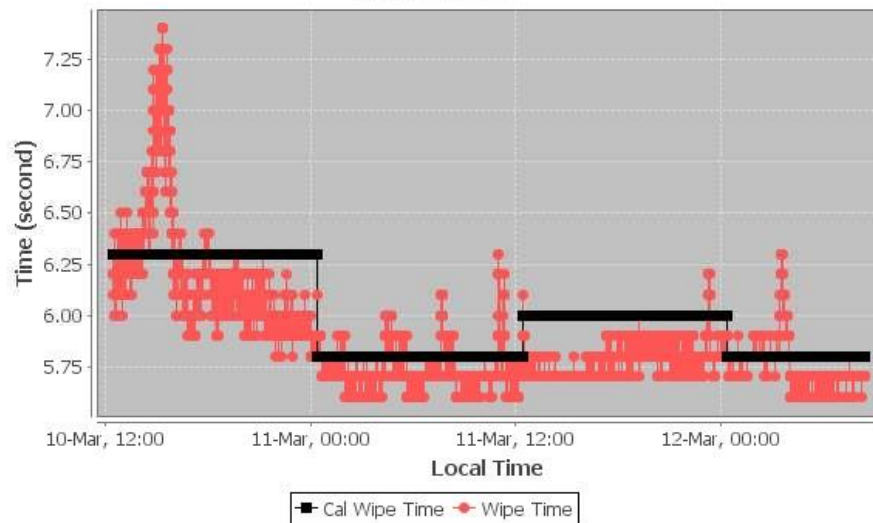

miniWiper Measurements

5958-387873

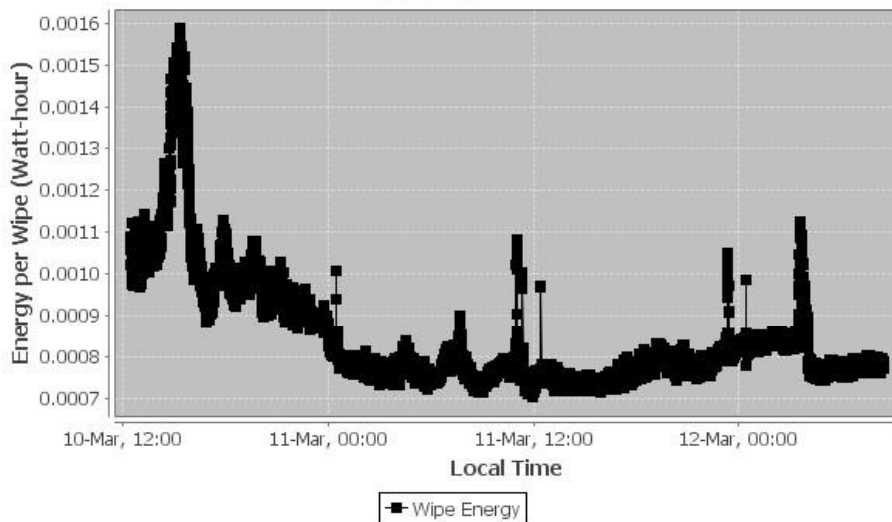

You may zoom this plot by drawing a square from upper left to lower right (click and hold left mouse button) that defines the zoom region. To zoom completely out, attempt to draw a square from lower right to upper left. Right click on the plot for options such as copy and print. The plot can be scrolled with the mouse while the Control key is held depressed. Copies of the plot can be obtained by right clicking on the plot and selecting Copy from the pop-up menu.



Different DATA Folders can be selected during one session of the program. In this case the software produces multiple plots. Unfortunately, the plots are presented exactly on top of one other and so when a new plot appears it is not obvious that the old plot is still there. It is. Just move the new plot to see previous plots.

The program can be re-run at any time. If an already processed DATA Folder is selected, then the program simply reads the miniWIPER's measurement files again. End the miniWIPERPlot program by closing the window.

In general, the recorded information will not be very useful to customers, save that it shows battery voltage and # of wipes. However, it may prove very useful should a wiper fail. Here is a list of information as well as why it is useful.

TEMPERATURE

The temperature within miniWIPER at the time of the wipe. +/- 5 deg C

BATTERY

Battery voltage measured just prior to beginning a wipe. Note that calibration events immediately precede wipes and give a draw the voltage down from its pre-wipe value. Useful to see battery condition and useful for calculation of source resistance which rises dramatically at end of life.

START CURRENT

The highest current observed during the first 1 second of motor operation. Useful to identify sticky mechanical systems.

AVERAGE CURRENT

The average current after 1 second of operation. Useful to determine average mechanical system friction.

PEAK CURRENT

The highest current observed after 1 second operation. Useful to identify peak mechanical system friction.

FINAL CURRENT

The current at the end of the wipe. Wipe end is identified as either time out or high motor current.



CAL WIPE TIME

The time to make a complete wipe as identified by a calibration.

WIPE TIME

The time to make a wipe without including scrub time.

WIPES COMPLETED

The total number of wipes the miniWIPER motor has made. Reset to 0 if motor is replaced. Useful for determining wear on motor and also for providing a stamp value for other service events. Like miles on the odometer!

Source Resistance - the average decline in battery terminal voltage from no load value to operating value, divided by average motor current. Useful in determining health of battery.

ENERGY PER WIPE

Please review the Low Drain Performance figure in section 1.3. The lithium batteries can provide 0.050 Amp service for roughly 50 hours at 1.4 Volts. miniWIPER uses two batteries so the miniWIPER battery can supply about $2 * (0.05 * 1.4 * 50) = 7$ Watt-hours total energy. A rough estimate of number of wipes available can be obtained by dividing the total battery energy by the amount of energy consumed per wipe. From the Energy per Wipe plot this is $7/0.0007 =$ about 10K wipes. This estimate is confirmed by the 8K wipes actually observed in the first plot above.


Please understand that this is just an estimate. Different wipers will have different amounts of mechanical friction that the batteries must overcome. Battery life will also vary dramatically as the mechanical friction of the individual wiper responds to hydrostatic pressure and will vary especially with battery temperature since the amount of energy a battery can provide declines at lower temperatures.

Once the performance of a wiper is established in a known deployment, the Energy per Wipe plot can be used to make an informed guess of battery life.

2.4 miniWIPERConcatenate

Begin the program operation by clicking “miniWIPERConcatenate.jar”. The program presents the screen shown below.



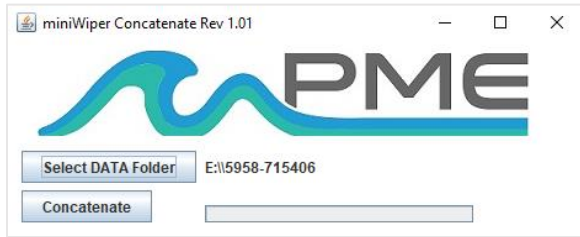

The miniWIPERConcatenate program reads and concatenates the files recorded by the miniWIPER. This program produces a CAT.txt file in the same folder as selected for the data. The CAT.txt file contains all the original measurements and contains two additional statements of time.

Select the folder that contains the files recorded by the miniWIPER. If the miniWIPERPlot program is run directly from the miniWIPER, then the program will suggest the folder located on the miniWIPER. You may accept this by clicking “Concatenate”, or you may click “Select DATA Folder” to browse your HOST computer’s hard drive. If the number of measurements recorded is small, for example a few thousand, then these can conveniently be plotted directly from the miniWIPER Logger’s storage. However, it is best to copy large measurement sets to the HOST computer and select them there. The file access to the miniWIPER is slow.

The miniWIPER measurement folders must NOT contain any files besides those the miniWIPER recorded and the CAT.txt file.

Click “Concatenate” to begin concatenating files and create the CAT.txt file.

The CAT.txt file will resemble the following:

```

miniWiper Concatenated Data File
Logger:          5958-200186
Concatenation Date: 2016Feb22 07:33:12 PST
Scrub: 1 ( ) Angle: 45 (deg)
Timeout: 8 (second) Threshold: 175 (mA)

    Unix Timestamp,          UTC_Date_&_Time,          Pacific Standard Time,          Battery,          Temperature,
    (Second),                (none),                    (none),                        (Volt),          (deg C),
    1455130200,              2016-02-10 18:50:00,      2016-02-10 10:50:00,          3.130000,        0.009000,
    1455130230,              2016-02-10 18:50:30,      2016-02-10 10:50:30,          3.120000,        0.007000,
    1455130260,              2016-02-10 18:51:00,      2016-02-10 10:51:00,          3.120000,        0.009000,
    1455130290,              2016-02-10 18:51:30,      2016-02-10 10:51:30,          3.120000,        0.007000,
    1455130320,              2016-02-10 18:52:00,      2016-02-10 10:52:00,          3.120000,        0.008000,
    1455130350,              2016-02-10 18:52:30,      2016-02-10 10:52:30,          3.120000,        0.009000,
    1455130380,              2016-02-10 18:53:00,      2016-02-10 10:53:00,          3.110000,        0.008000,
    1455130410,              2016-02-10 18:53:30,      2016-02-10 10:53:30,          3.110000,        0.007000,
    1455130440,              2016-02-10 18:54:00,      2016-02-10 10:54:00,          3.110000,        0.009000,
    1455130470,              2016-02-10 18:54:30,      2016-02-10 10:54:30,          3.110000,        0.006000,
    1455130500,              2016-02-10 18:55:00,      2016-02-10 10:55:00,          3.110000,        0.009000,
    1455130530,              2016-02-10 18:55:30,      2016-02-10 10:55:30,          3.110000,        0.007000,
    1455130560,              2016-02-10 18:56:00,      2016-02-10 10:56:00,          3.110000,        0.008000,
    1455130590,              2016-02-10 18:56:30,      2016-02-10 10:56:30,          3.110000,        0.009000,
  
```

End the miniWIPERConcatenate program by closing the window.



CHAPTER 3: MINIWIPIER

3.1 Overview

The miniWIPIER is intended to provide a gentle wiping of the miniWIPIER oxygen-sensitive membrane at user-programmable intervals. Customers will be required to open the wiper to set the wiper interval or to exchange the batteries. This chapter describes the wiper internal features.

3.2 Opening and Closing the Wiper

The wiper circuitry is contained in a waterproof housing that must be opened. The housing is opened by unscrewing the white pressure housing from the black end cap. Turn the pressure housing counterclockwise relative to black end cap. Close by reversing this procedure after being sure that the o-ring is free from debris. Lube o-ring occasionally with grease intended for buna-N o-ring material.

Please attempt to handle the miniWIPIER only by the aluminum chassis, without touching the circuit card.

When closing the miniWIPIER just screw the white cylinder onto the black end cap until the cylinder just touches the end cap. Do not tighten! miniWIPIER tends to get a little tighter during deployment.



3.3 Electrical Connections and Controls

Removal of the cover reveals the wiper connections and controls, shown below.

The **LED Light** is a red or green LED. This is used to indicate different features described elsewhere in this manual.

The **Wiper Control Switch** controls the wiper mode:

- **WIPE:** When the switch is in this position wipes occur.
- **HALT:** When the switch is in this position wipes do not occur.

The **USB Connection** allows communication between the wiper and an external computer. When connected, the wiper is in halt mode regardless of the Wiper Control Switch setting. When



disconnected the wiper mode is controlled by the Wiper Control Switch. The switch position may be changed while the USB is connected.

The Main Batteries (2 X AA on side opposite to pictured above) provide main power to the miniWIPER. Note the positive (+) terminal.

3.4 Battery Replacement

Be sure that the replacement battery is compatible with miniWIPER. PME recommends [Energizer L91 AA size batteries](#). You may also use AA size alkaline batteries such as [Duracell Coppertop](#).

Caution: Improper replacement of the battery will damage the miniWIPER. Installing the batteries backwards will permanently damage the miniWIPER.

Follow these steps:

1. Move the Wiper Control Switch to the HALT position.
2. Remove the depleted batteries noting the position of the (+) terminal.
3. Use only new, fully charged batteries of the same type.
4. Install fresh batteries with the (+) position the same as the removed battery.
5. The (+) position is also marked on the inside of the battery holder.
6. The miniWIPER LED Light should flash once to indicate that software is beginning operation within a second or two after you complete the battery installation. At this time the wiper will enter the mode selected by the Wiper Control Switch.

Record the number of wipes at battery replacement time. This may be helpful later when determining battery depletion.

3.5 Final Mounting Instructions

Appropriate mounting of the combined wiper and wiped sensor at the deployment site is the customer's responsibility. PME provides the suggestions below.

EASY METHOD

The mounting backbone has holes at each end. The easy way to mount the wiper/sensor is by shackling ropes to each end. In general, one rope will extend vertically downward to the next sensor/wiper or to an anchor. The rope from the opposite end will extend vertically upward to the next sensor/wiper or to a surface float. See the sensor manual for help with deciding if the sensor should face upward or downward.



HARD METHOD

The wiper is designed to inhibit fouling organisms by mechanically removing them shortly after they attach to the sensor while they are still small. The wiper is NOT intended to remove "birds' nest" type debris that may accumulate on the sensor if used in moving water. If debris are anticipated, find some method of screening that keeps anything larger than a small twig from catching on the wiper wheel.

Enjoy your new miniWIPER for the miniDOT Logger!





1483 POINSETTIA AVE., STE. #101
VISTA, CA 92081 USA

miniWIPER for miniDOT Maintenance Kit

USER'S MANUAL

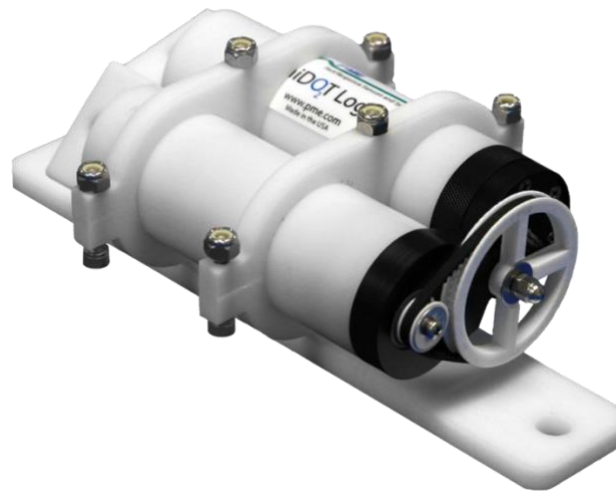


TABLE OF CONTENTS

WARRANTY.....	3
Limited Warranty	3
SAFETY INFORMATION	5
Bursting Hazard	5
CHAPTER 1: OVERVIEW	6
CHAPTER 2: EXTERNAL PARTS.....	7
2.1 Overview	7
2.2 Belt Installation.....	7
2.3 Brush Installation	7
2.4 Washer Installation	8
CHAPTER 3: INTERNAL PARTS.....	9
3.1 Overview	9
3.2 Endcap o-ring replacement.....	9



WARRANTY

Limited Warranty

Precision Measurement Engineering, Inc. (“PME”) warrants the following products to be, as of the time of shipment, free from defects in materials or workmanship under normal use and conditions for the period indicated below corresponding to the product. The warranty period commences on the original date of purchase of the product.

Product	Warranty Period
Aquasend Beacon	1 year
miniDOT Logger	1 year
miniDOT Clear Logger	1 year
miniWIPER	1 year
miniPAR Logger (Logger only)	1 year
Cyclops-7 Logger (Logger only)	1 year
C-FLUOR Logger (Logger only)	1 year
T-Chain	1 year
MSCTI (excludes CT/C-sensors)	1 year
C-Sense Logger (Logger only)	1 year

For valid warranty claims made and covered defects existing during the applicable warranty period, PME will, at PME’s option, repair, replace (with the same or then most similar product) or repurchase (at purchaser’s original purchase price), the defective product. This warranty extends solely to the original end-user purchaser of the product. PME’s entire liability and the sole and exclusive remedy for product defects is limited to such repair, replacement or repurchase in accordance with this warranty. **This warranty is provided in lieu of all other warranties express or implied, including, but not limited to warranties of fitness for a particular purpose and warranties of merchantability.** No agent, representative, or other third party has any authority to waive or alter this warranty in any way on behalf of PME.

WARRANTY EXCLUSIONS

The warranty does not apply in any of the following circumstances:



- I) The product has been altered or modified without PME's written authorization,
- II) the product has not been installed, operated, repaired, or maintained in accordance with PME's instructions, including, where applicable, use of proper grounding to an earth ground source,
- III) the product has been subjected to abnormal physical, thermal, electrical, or other stress, internal liquid contact, or misuse, neglect, or accident,
- IV) the product failure occurs as a result of any cause not attributable to PME,
- V) the product is installed with ancillary devices such as flow sensors, rain switches, or solar panels that are not listed as compatible with the product,
- VI) the product is installed in a non-PME specified enclosure or with other incompatible equipment,
- VII) to address cosmetic issues such as scratches or surface discoloration,
- VIII) operation of the product in conditions other than that for which the product was designed,
- IX) the product has been damaged due to events or conditions such as caused by lightning strikes, power surges, unconditioned power supplies, floods, earthquakes, hurricane, tornados, vermin such as ants or slugs or intentional damage, or
- X) products provided by PME, but manufactured by a third-party company, which products are subject to the applicable warranty extended by their manufacturer, if any.

There are no warranties that extend beyond the above limited warranty. In no event is PME responsible or liable to purchaser or otherwise for any indirect, incidental, special, exemplary, or consequential damages, including, but not limited to, lost profits, loss of data, loss of use, business interruption, loss of good will, or cost of procuring substitute products, arising out of or in relation to the product, even if advised of the possibility of such damages or losses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARRANTY CLAIM PROCEDURES

A warranty claim must be initiated within the applicable warranty period by first contacting PME at info@pme.com to obtain an RMA number. The purchaser is responsible for proper packaging and return shipment of the product to PME (including shipping expense and any related duties or other costs). The issued RMA number and purchaser's contact information must be included with the returned product. PME is NOT liable for loss or damage of the product in return transit and recommends that the product be insured for its full replacement value.

All warranty claims are subject to PME's testing and examination of the product to determine if the warranty claim is valid. PME may also require additional documentation or information from the purchaser to evaluate the warranty claim. Products repaired or replaced under a valid warranty claim will be shipped back to the original purchaser (or its designated distributor) at PME's expense. If the warranty claim is found to be not valid for any reason, as determined by PME in its sole discretion, PME will notify the purchaser at the contact information provided by the purchaser.



SAFETY INFORMATION

Bursting Hazard

Should water enter the miniWIPER and come into contact with the enclosed batteries, the batteries may generate gas causing the internal pressure to increase. This gas will likely exit via the same location where the water entered, but not necessarily. The miniWIPER is designed to release internal pressure as the end cap is unscrewed and prior to the disengagement of the end cap threads. If internal pressure is suspected, then treat the miniWIPER with extreme caution.



CHAPTER 1: OVERVIEW

Your miniWIPER will provide a gentle brush action across the miniDOT's oxygen-sensitive membrane, which is intended to reduce or eliminate fouling organisms. This wiper is an accessory for the miniDOT that can be added at any time. Over time, the miniWIPER's brush, timing belt, or o-rings can be worn down with use. The miniWIPER Maintenance Kit provides easy-to-replace parts for the end user.

Included in the miniWIPER Maintenance Kit are the following:

- Wrench
- Timing Belt
- Pulley with brush
- Washers
- Endcap o-rings
- Synthetic oil

The following sections will describe each of the above and provide instructions for each.



CHAPTER 2: EXTERNAL PARTS

2.1 Overview

This section describes the replacement of external parts that do not require the user to open the miniWIPER pressure case.



2.2 Belt Installation

The timing belt rotates the pulley with brush across the face of the miniDOT. Should the belt break, a new one can be installed.

To install the new belt, the pulley with brush must be removed from the miniWIPER. Use the wrench to do this. The wrench provided will secure the flat nut while a user-provided wrench will loosen the

'acorn' nut at the top of the bolt going through the pulley. Remove both the nuts, the washer, and the pulley from the bolt. Leave the spacer (and if there is a second washer below the spacer) in place.

Place the new timing belt on the pulley such that the teeth of the belt are properly lined up with the grooves in the pulley. If this is not done correctly, the belt cannot stretch enough for installation onto the driveshaft pulley.

Holding the belt taut with the pulley, the brush facing downward, slide the excess part of the belt over the driveshaft pulley, making sure the teeth of the belt align with the grooves in the driveshaft pulley. Slide the pulley onto the bolt with spacer. Install the washer and flat nut. Tighten the flat nut by hand against the washer. Hold the flat nut in place with the provided wrench and tighten the acorn nut against it with another wrench.

2.3 Brush Installation

The brush is the most likely part of the miniWIPER to wear down. For ease of use, PME has provided a pulley with the brush already glued in place.

The wrench provided will secure the flat nut and a user-provided wrench will loosen the 'acorn' nut at the top of the bolt going through the pulley. Remove the two nuts, washer, and pulley from the bolt. Leave the spacer (and if there is a washer below the spacer) in place.

Place the timing belt on the new pulley such that the teeth of the belt are properly lined up with the grooves in the pulley. If this is not done correctly, the belt cannot stretch enough for installation onto the driveshaft pulley.

Holding the belt taut with the pulley, the brush facing downward, slide the excess part of the belt over the driveshaft pulley, making sure the teeth of the belt align with the grooves in the driveshaft



pulley. Slide the pulley onto the bolt with spacer. Install the washer and flat nut. Tighten the flat nut by hand against the washer. Hold the flat nut in place with the provided wrench and tighten the acorn nut against it with another wrench.

2.4 Washer Installation

Older miniWIPER units may not have a washer underneath the spacer to prevent wear down of the spacer against the black plastic. PME has provided two washers should the washer wear down over time.

The wrench provided will secure the flat nut and a user-provided wrench will loosen the 'acorn' nut at the top of the bolt going through the pulley. Remove the two nuts, washer, pulley, and spacer from the bolt.

Place the washer on the bolt such that the flat side without markings is against the black plastic.

Place the timing belt on the new pulley such that the teeth of the belt are properly lined up with the grooves in the pulley. If this is not done correctly, the belt cannot stretch enough for installation onto the driveshaft pulley.

Holding the belt taut with the pulley, the brush facing downward, slide the excess part of the belt over the driveshaft pulley, making sure the teeth of the belt align with the grooves in the driveshaft pulley. Slide the pulley onto the bolt with spacer. Install the washer and flat nut. Tighten the flat nut by hand against the washer. Hold the flat nut in place with the provided wrench and tighten the acorn nut against it with another wrench.



CHAPTER 3: INTERNAL PARTS

3.1 Overview

This section describes the replacement of internal parts that requires the user to open the miniWIPER pressure case. To do so, hold the black end cap where the pulleys are located and unscrew the white pressure case.

3.2 Endcap o-ring replacement

Located in a groove in the endcap is an o-ring that prevents water from entering the pressure case. Over time this o-ring can wear down if it is not cleaned and oiled. Note the location of the o-ring such that the new one is installed in the exact location.

The o-ring should be easy to remove from the endcap by stretching it past retaining portion of the endcap. Carefully slide it along with circuit board such that no oil gets on the circuit board.

Clean out the o-ring groove such that there is no debris within it. Clean the endcap threads until they are free of debris. Clean and lightly oil the new o-ring. Slide it along the circuit board and then stretch it into place in the o-ring groove. Check for any debris. Add more oil if needed.


Clean the inside of the pressure case where the o-ring will be located. Make sure it is free of debris. Screw the pressure case back onto the endcap.

Enjoy your new miniWIPER for miniDOT Maintenance Kit!



miniWIPER

Take control of your water quality data collection. The miniWIPER is a high-performance, anti-fouling device specifically engineered for the miniDOT Logger.

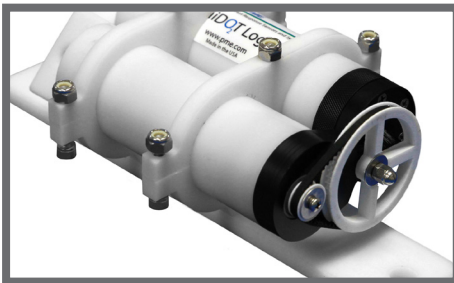

The miniWIPER is an easy-to-use accessory that can be added to the miniDOT Logger at any time. Made with strong Delrin plastic, the miniWIPER® is built for long-lasting durability in the field.


Self contained and fully submersible, the miniWIPER is powered by two AA lithium batteries and offers programmable, interval-wipe settings as short as once every hour or as long as once every 24 hours through its integrated software. This internal application also tracks battery voltage, calibration and other data, giving you complete control.



The miniWIPER uses a gentle-brushing action across the entire miniDOT Logger oxygen-sensor membrane to wipe away fouling organisms, and then rests away from the sensor to prevent monitoring interference for the most reliable data collection.

FEATURES

- Self-Contained and powered
- Various wiping intervals
- Full wipe of sensor
- Long-lasting in the field
- Small, durable and easy to use
- 25 meter depth rating

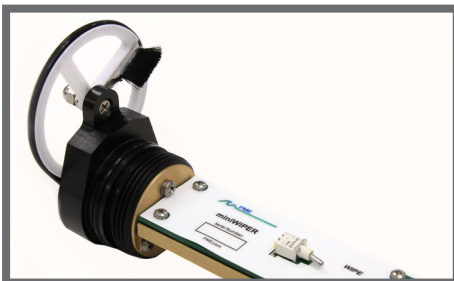

Contact us now and wipe away your data-collection worries.